



## EZ 612 TIMER INSTRUCTIONS

**Menu Button** is used to Scroll

**Select Button** selects the hours, minutes or seconds. Selected number will blink.

**Set Button** Advances the hours, minutes or seconds after selecting with the Select Button

**Display** has a built in screen saver and display turns off after 20 seconds of inactivity to conserve power—timer is still working. Pressing the Menu button will reactivate the display.

1. **Connect the Battery** This timer will work with either a 6 or 12-volt rechargeable battery. Red is positive + and black is negative -.
2. **Set the Time of Day** Press the **MENU** button until the display reads “**Time is:**” Press the **Select** button and the number in the hours position will blink. Use the **Set** button to change the hours. To the right of the time you will see “a” for AM and “p” for PM. Repeat the process for the minutes setting.
3. **Set Feed Times** Press the **Menu** button until the display reads “**Feed1**”. Set the feed time using the Select and Set buttons just as you did in step 2. After setting the feed time, press the **Select** button to select the motor run time and use the **Set** button to change the setting. You may feed from 1 to 60 seconds. Press Menu button and repeat these steps to set the remaining feed times. You may feed up to 9 times per day. To turn a feed time off, press Menu button to display the feed event. Press the **Select** button and the motor run time will blink. Use the **Set** button to increase the seconds until “**OFF**” is displayed.
4. **Test the Timer** Press the Menu button until the display reads “**Test Run for:**” Press the **Select** button and the number for seconds will blink. Use the **Set** button to set the test time in seconds. Press the **Menu** button to initiate the test procedure. The display will read “**Push key to Stop**”. You may push a key to stop the test or just wait and a 10 second countdown will begin to allow you to move away from the feeder. The unit will then run for the number of seconds you have set it for.
5. **Wires** The Green and Black wires are for Solar Panel hook up. The green is positive and the black is negative. The Orange and White wires are for the motor. Orange is positive and white is negative. Connectors are installed for easy hook up to Texas Hunter Products equipment.
6. Leave the protective dust cap inserted into the timer’s factory programming receptacle.
7. Contact Texas Hunter Products at 800-969-3337 with any questions.

# EZ612 Digital Timer 5-Year Limited Warranty

**DIGITAL TIMER WARRANTY** Your EZ612 Digital Timer is protected by this warranty:

	<b>WARRANTY PERIOD:</b>	<b>WE WILL:</b>	<b>THE CONSUMER WILL BE RESPONSIBLE FOR:</b>
<b>ONE-YEAR WARRANTY</b>	One year from original purchase date.	Pay all costs for repairing or replacing any parts of this Digital Timer which prove to be defective in materials or workmanship.	Sending product to address below and enclosing \$8 for return shipping & handling.
LIMITED 2 <sup>ND</sup> – 5 <sup>TH</sup> YEAR WARRANTY Digital Timer	Second through fifth years from original purchase date.	Replace Digital Timer unit which proves to be defective in materials or workmanship.	Sending product to address below, including \$45 for replacement cost and \$8 for return shipping & handling (\$53 total). Checks, money orders, credit cards accepted.
<b>Ship to: Warranty Department, Texas Hunter Products, 3350 IH 35 North, San Antonio, TX 78219</b>			

In the U.S.A., your Digital Timer is warranted by Texas Hunter Products. We authorize no person to change or add to any of our obligations under this warranty. Our obligations for service and parts under this warranty must be performed by us or an authorized Texas Hunter Products servicer.

**IF YOU NEED SERVICE:**

Keep your original sales receipt, invoice, delivery slip, or some other appropriate payment record. The date on the bill establishes the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by contacting Texas Hunter Products. This warranty only applies in the 50 States of the U.S.A. Product features or specifications as described or illustrated are subject to change without notice. All warranties are made by Texas Hunter Products. Contact: Texas Hunter Products, 3350 IH 35 North, San Antonio, TX 78219. (800) 969-3337.

**NORMAL RESPONSIBILITIES OF THE CONSUMER:**

**This warranty applies only to products in ordinary outdoor use, and the consumer is responsible for the items listed below:**

1. Proper use of the Timer in accordance with instructions provided with the product.
2. Proper installation in accordance with the instructions provided with the Timer.
3. Proper connection to the specified battery type.
4. Expenses for removing the product from any container or device which was not part of the Timer when it was purchased or shipped from the factory.
5. Damages to finish after installation.
6. Purchase and replacement of rechargeable battery (not included with Timer).

**EXCLUSIONS:**

**This warranty is NOT TRANSFERABLE and does not cover the following:**

1. CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY. Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.
2. Repair service fees which do not involve malfunction or defects in workmanship or material, or for Timers not in ordinary outdoor use. The consumer shall pay for such repair service fees.
3. Damages caused by services performed by servicers other than Texas Hunter Products or its authorized servicers; use of parts other than genuine Texas Hunter Products parts; external causes such as abuse, misuse, inadequate power supply or acts of God.