



## Installation Instructions

Qty.	Parts List
1	Sportsman's Shooters Shelf
1	Universal Camera Mount
1	Phone Mount
2	Swivel Shooting Rest
3	Cup Holders
3	1/4-20" x 1" Bolt
3	1/4" Hex Nut w/ Star Washer

### For Installation in Texas Hunter Deer Blinds

**Note:** Mounting holes in shelf match existing factory holes in lower window track – no drilling required. Shelf can be mounted two ways. For best results with swivel shooting rests, use upper mounting holes in shelf. Use lower mounting holes in shelf to install flush with lower window track.

**Step 1.** Remove nuts and bolts from lower window track.

**Step 2.** Line-up holes in shelf with holes in window track and re-install nuts and bolts.

### For Installation in Other Deer Blinds *Note: 11/32" drill bit needed to drill mounting holes.*


**Step 1.** Use shelf as template for selecting desired mounting location, mark three top holes only.

**Step 2.** Drill three holes using 11/32" drill bit.

**Step 3.** Line-up holes and install using 1" x 1/4" bolts and nuts provided.

**Accessory Installation** - Install Cupholders and Shooting Rests. Install Camera Mount by removing the thumb screw from the bottom. Choose your desired mounting location, hold camera mount over the top of the hole and re-install thumb screw until tight.

**Note:** Fits standard cameras, camcorders or phone mount.

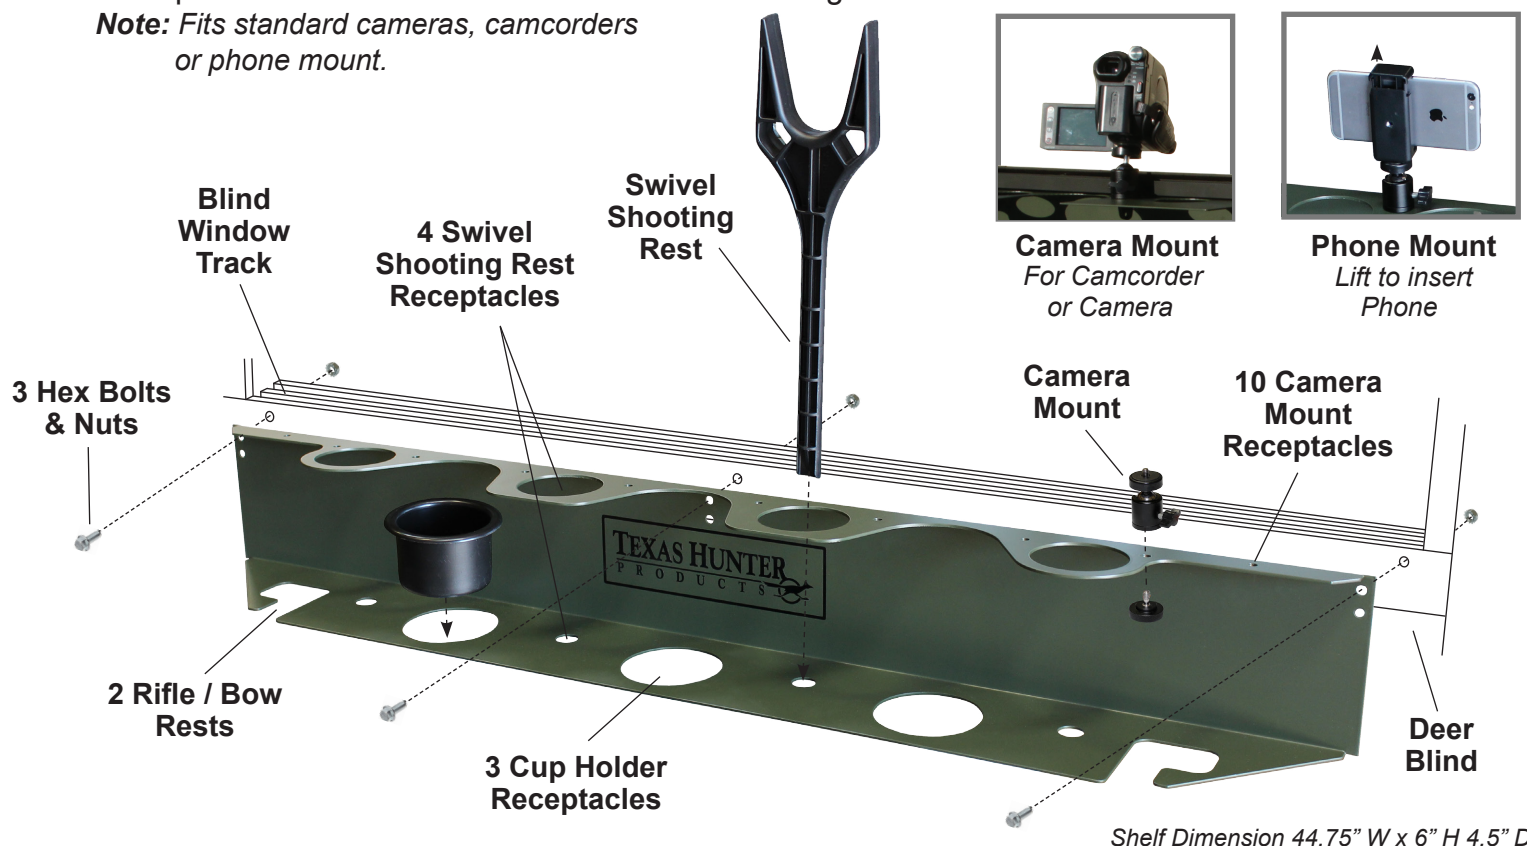

Shelf Dimension 44.75" W x 6" H 4.5" D