




TEXAS HUNTER[®]

P R O D U C T S


RF50 & RF100 ROAD FEEDER

Assembly Instructions

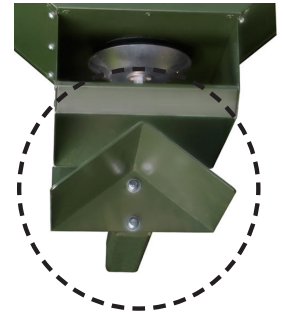


Step 1 Attach V-shaped Feed Deflector Plate to the bottom of the hitch bracket using the two short bolts.

Note: Nutserts are installed in the bracket for your convenience.

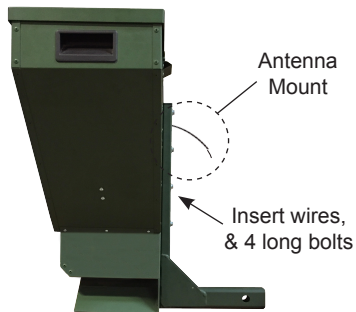

Step 2 Attach the 2" Receiver Hitch Mounting Bracket to the back of the feeder by lining-up the bracket and inserting the **RED** and **BROWN** wires with connectors through the round hole in the back of the feeder. Secure the bracket in place using the longer bolts.

Step 3 Stand the feeder upright on the feed deflector plate and hitch bracket, open the lid and remove the cover from the remote compartment.

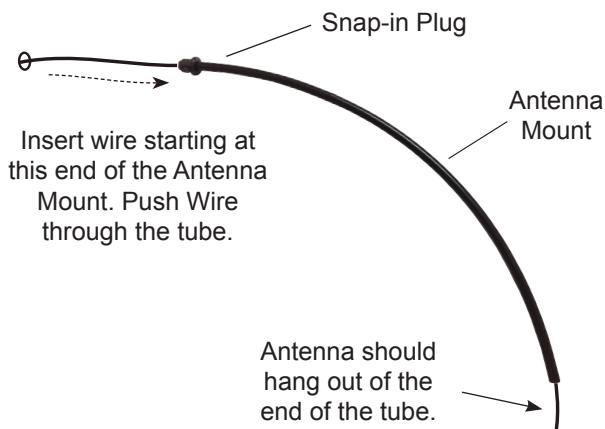

Step 4 Push the thin black antenna wire that is inside the remote compartment through the back of the feeder. Insert the wire into the Antenna Mount starting at the end with the Snap-in Plug. Push wire through Antenna Mount until wire hangs out the other end of the tube.

Insert the Snap-in Plug end of the Antenna Mount into the hole in the back of the feeder – it will snap into place. Gently pull any excess antenna through the end of the tube.

Note: The antenna wire will simply hang from the end of the tube.

Step 5 You may connect the power source in two ways:

A) **Vehicle trailer plug connection:** Match the two wires that were inserted through the hole in the back of the feeder, with the same color wires and plugs inside the remote compartment. Once the feeder is installed on the vehicle, connect the feeder to the vehicle's trailer plug.

Note: You must turn on the vehicle's parking / headlights to power the feeder.

B) **Rechargeable battery connection:** Install a 12-volt rechargeable battery in the battery holder provided on the right side of the compartment and secure the battery using the Velcro strap. Then connect the red wire with the flat battery connector to the red (positive) terminal on the battery, and the dark brown wire to the black (negative) terminal on the battery.

Note: Disconnect one connector from battery terminal when storing to prevent discharge.

Step 6 Press the button on the wireless remote control key chain to activate feeder. **Note:** The remote transmitter is packed inside the remote / battery compartment inside the feeder.

